

Please observe the following notes on changing images for ILUMAG top

- The ILUMAG top system is equipped with a magnetically lockable cover for easy, fast image changing.
- Smaller image formats can also be changed on the wall if necessary.
- Otherwise, to change the image, place the system on a smooth surface after disassembly.
- Open the cover and place it next to it.
- Remove the previous backlit film and stow or dispose of it.
- Then insert the new backlit evenly to the edges with the motif print facing upwards and close the cover again.
- If the Backlit does not lie sufficiently smoothly, you can fix it slightly with transparent adhesive tape at the magnetic edges.
- It is recommended to clean the hood and the backlit panel with a soft, dry cloth (if necessary with the help of methylated spirits or similar) when changing them.
- Finally, hang the system back in place and reconnect it to the power supply according to the instructions.

Please do not hesitate to contact us if you have any questions.

Good luck with the image change!